

Frozen Oil Charging Instructions

(Application:All electric air conditioner series)

Version: V2.0 File No :ZB3292-153 Superway Auto Standard



ZHENGZHOU SUPERWAY AUTO TECHNOLOGY CO., LTD

Web: www.superautoway.com

E-mail: info@superautoway.com

1. Prepare the material and the tools :

Gloves	Frozen oil	Scissors	Oil pipe
			

(Before charging , pls insure all the material is qualified and working well)

2. Wear the gloves, and the gloves should be clean, other wise, the dirty things with flow with the oil into the air conditioner, it will cause bad effect to the air conditioner

3. Use the scissors open the frozen oil , then charging as below indication .pls finished the charging within 5 minutes once you open it .

4. The oil pipe is inserted into the oil bottle, and the oil pipe joint is mounted on the low pressure filling nozzle of the system, and the joint valve is unscrewed. The vacuum pressure difference after helium inspection is used to suck the frozen oil into the system. The filling amount base on BOM sheet, After filling, the label is pasted on the shell.

5. Clean up the work place, and take the garbage to Trash can.

Frozen oil charging volume

Model	Frozen oil
SEE-24	400CC
SEE-28	350CC*2
SEE-32	400CC*2
SEE-38	400CC*2

(*2 means you should add the frozen oil in two side of the air conditioner)

Photos reference



ZHENGZHOU SUPERWAY AUTO TECHNOLOGY CO., LTD.

Add: No.9-1 Liudong Rd (450008), Zhengzhou, China

Web Site: www.superautoway.com

Technical Support: technical@superautoway.com

E-mail: info@superautoway.com